

## **MS5209 EARTH RESISTANCE TESTER**

### Features:

- Battery operated, low power consumption
- "Simplified Measurement" function
- Battery check function

*MS5209 EARTH RESISTANCE TESTER* 

# **Specifications**

#### **Measurement Ranges**

- Earth resistance: 10/100/1000 Ohms - Earth voltage: 30V AC (5kOhm/V approx.)

#### **Accuracy**

- Earth resistance: 5% f.s. - Earth voltage: 5% f.s.

#### **Measurement Systems**

- Earth resistance by constant current inverter 800Hz approx. 2mA
- Earth voltage by rectifier type 5KOhms/V approx. 40-500Hz

#### **Self-check Function**

Lead wire connection to C and P terminals and proper auxiliary earth resistance can be check by pressing "BATT.CHECK" button. Lead wire connection to C and E terminals is good when "OK" indicator is lit.



